




**CHIC**

*Bathroom Scales*

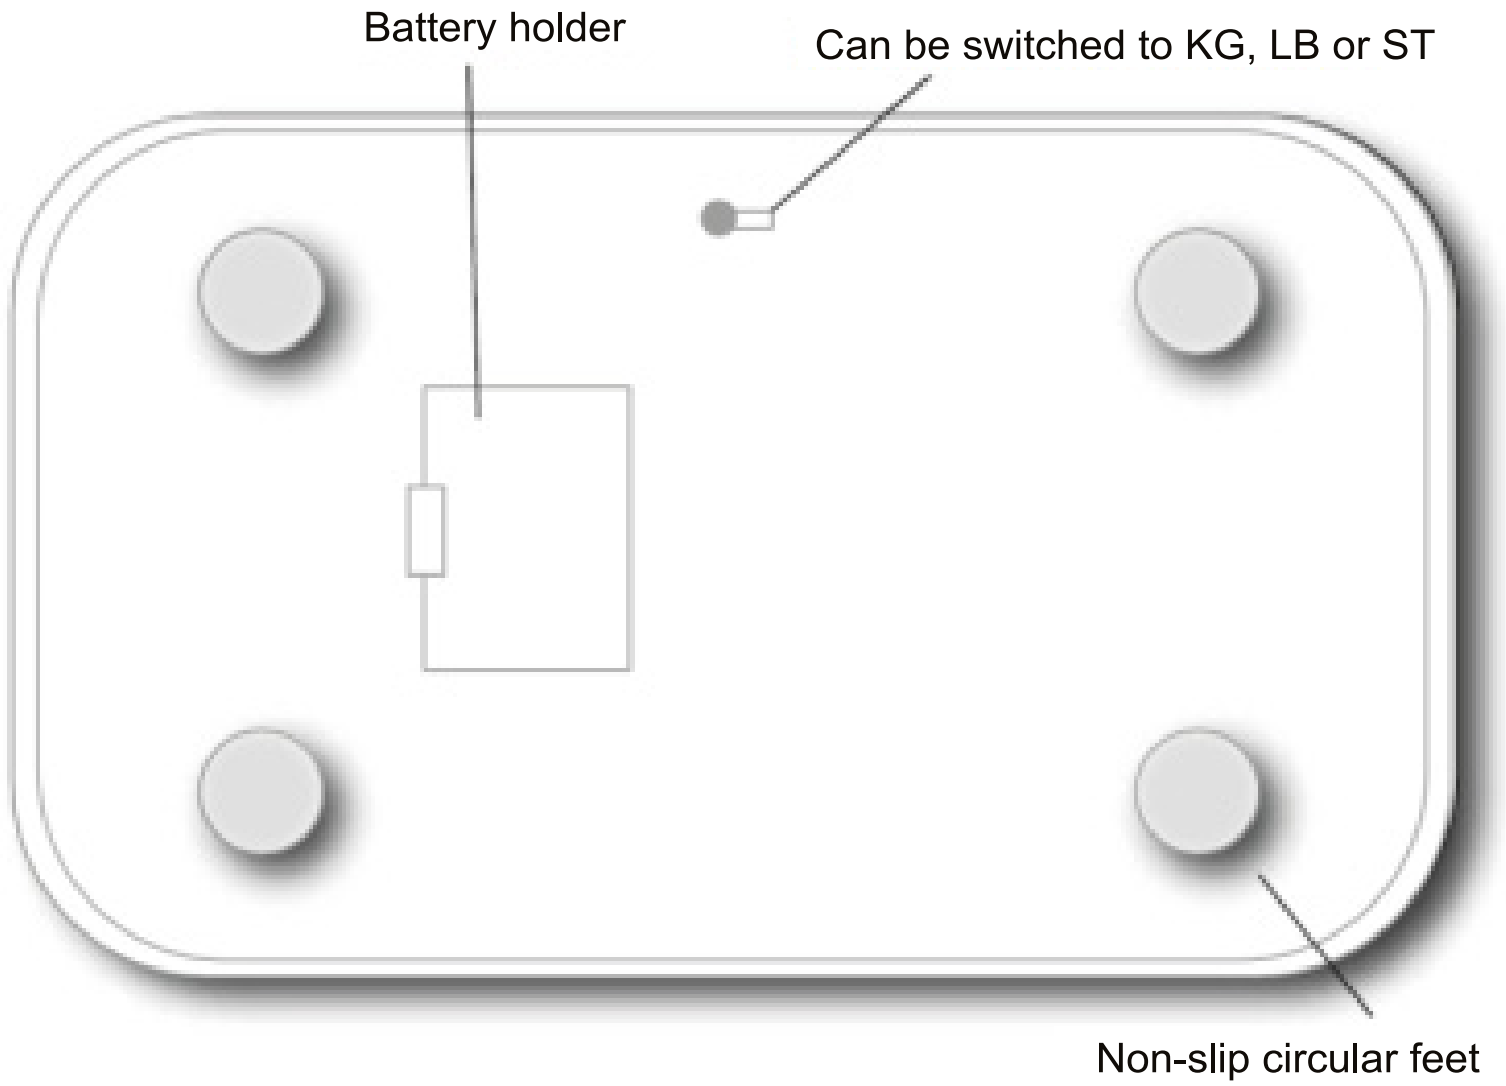

## Product Guarantee

### 1 YEAR PRODUCT GUARANTEE

This guarantee is valid in the UK and Ireland only.

To validate the guarantee, please retain your receipt as proof of purchase.

When querying any product information, please use the reference provided below to allow us to identify the product:

**\*PRODUCT CODE INSERTED HERE BY FACTORY\***

All products are individually tested before leaving the factory.

In the unlikely event of the item being faulty within 28 days of purchase, it should be returned to the place of purchase for a replacement.

If the fault develops after 28 days and within the 12 months of original purchase, you should contact the helpline number below, quoting the product code above. You will be asked for your proof of purchase and proof of fault for the issue to be reviewed.

If deemed faulty, the product will be repaired or replaced - usually dispatched within 7 working days of receipt.

If for any reason the item is replaced during the guarantee period, the new guarantee will be calculated from the original purchase date, therefore it is vital to retain your original receipt to indicate the original purchase date.

To qualify for the manufacturers warranty, the product must be used in accordance with the instructions provided.

Guarantee exclusions - replacement or repair of goods under the guarantee will be voided if:

- The fault has been caused by misuse, negligent use or used contrary to the instructions provided.
- Repairs have been attempted by persons other than the manufacturers staff.
- The item has been used for non-domestic or commercial use.

This guarantee is offered as an additional benefit and does not effect your statutory rights as a consumer and is the responsibility of ADDIS Housewares LTD.

[www.acerliving.com](http://www.acerliving.com)

(+44) 0800 515 300

[support@acerliving.com](mailto:support@acerliving.com)

## Our tips for most accurate weighing results

- Weigh yourself once a week - weighing yourself on a weekly basis at the same time will give a more accurate picture of your desired journey.
- Weigh yourself in the morning - this will ensure your results are not effected by what you may have eaten or haven't quite processed yet.
- Keep factors consistent - try to weigh yourself wearing similar clothing and also in a similar location to ensure the results can be fairly compared.

The Acer trademarks are licensed to ADDIS Housewares LTD by Acer Incorporated.

## Specification

Display: All data displayed when power on

Capacity: 180kg

Division: 1D= 50g/0.1lb

Unit: KG/LB/ST

Voltage: 4.5V

Battery: 3\*AAA battery

Low battery indication: 2.4V±0.2V, display “Lo” and power off

Current: ≤25mA

Standby current: ≤10 μ A

Overload indication: overload more than 2.5kgs, total 182.5kgs display “Err”

Best working temperature: 5~35°C


Storage temperature: -10~60°C

Moisture environment: ≤90%RH

Dimensions: 320mm x 255mm x 20mm

## Install the batteries

- Open the battery cover.
- Insert the batteries, aligning in the correct position.
- Close and secure the battery cover.

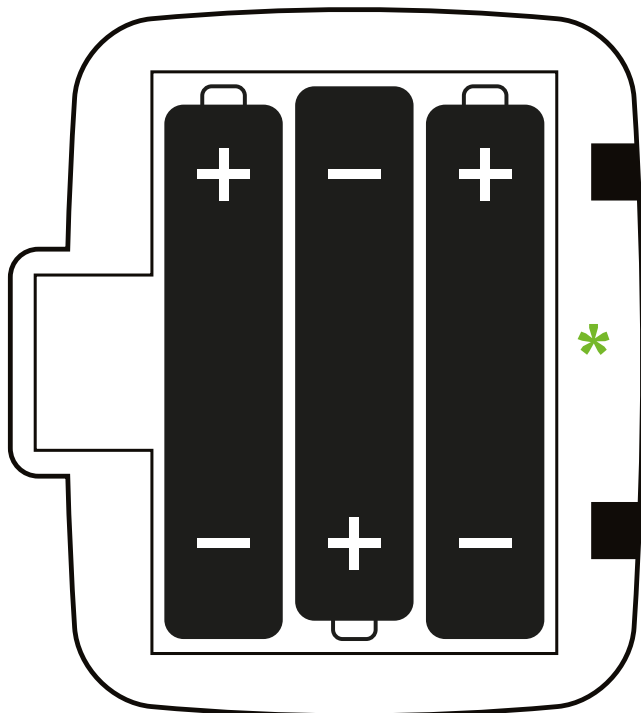

\* We recommend using Alkaline Batteries

## Warnings

- Please keep the scales away from wet floors. Refrain from using the scales if the glass surface is wet to avoid slipping.
- Place feet evenly and centrally on the glass surface when in use.
- The platform of the scale is made of glass - avoid placing sharp or harsh objects onto the surface.
- The scales are not waterproof, do not submerge in water.
- To clean, use soft, non-scratch materials when wiping the surface of the scale. Avoid using strong chemical cleaning solutions.
- If scales are not used for prolonged periods, we suggest removing batteries to avoid unnecessary corrosion.
- Scale must be placed on a flat, hard surface for accurate results.